



Getting Started

Warranty Registration




**Smart Watch
(Ver 1)**

GETTING STARTED





- 1 Connect the USB charging cable to a USB port.

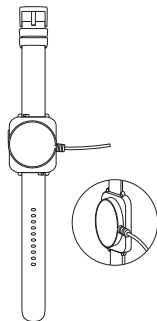

- 2 Position the magnetic charging cable to the charging points at the back of your smart watch.

- 3 When charging begins, you will see a battery icon on the display screen.
The display will automatically switch off after a few seconds.

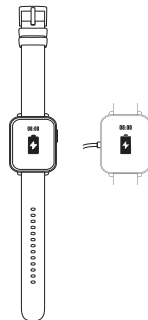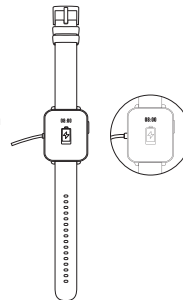

- 4 To check the charging progress, press the button on the side.
A solid battery icon indicates a full charge.



Zewa Inc.
12960 Commerce Lakes Dr. # 29
Fort Myers, FL 33913
Toll Free: 888-993-3592

www.zewa.com

■ Download and install the Zewa-Fit App at www.zewa.com/zewa-fit

IMPORTANT: During the install (or when first opening the app), the app will ask several installation questions, accept (say "yes") to all of them.

■ Create a new user account in the App

- After opening the App for the first time, login using an existing login option or create a new user account by selecting "Other Login Options".
- When selecting "Other Login Options", select "Create Account".
- Enter a valid E-Mail address and press "Get Code". The system will E-Mail you a verification code. Enter

that code into the app and press "Login".

- Continue with entering your information.

■ Pair Smart Watch to the App

- In the app, tap on "Device" on the bottom of your screen.
- Tap on "Add device".
- Select device you would like to add.
- Confirm pairing by touching the display as indicated on the watch display.

NOTE:

- Please ensure that your phone Android version is 8.0 and above or iOS 12.0 and above, and supports Bluetooth Low Energy (BLE).

- Pair your smart watch from the app, do NOT pair it directly from the phone's Bluetooth setting.

Quick Start Guide

Refer to in-app  **More** > **About the Device** menu.

Product is for non-medical use only

This device or software is intended for use only for general wellbeing purposes or to encourage or maintain a healthy lifestyle, and is not intended to be used for any medical purpose (such as the detection, diagnosis, monitoring, management or treatment of any medical condition or disease). Any health-related information provided by this device or software should not be treated as medical advice. Please consult a physician for any medical advice required.

Warranty Registration

[Visit us online to register your product and receive special offers and news from Zewa.](#)

For a detailed description of your warranty, please refer to the instruction manual.

www.zewa.com